


Leave the instructions on the table , do not take them with you.

eWoggle assembly instructions

Red numbers represent the order in which the components should be installed.

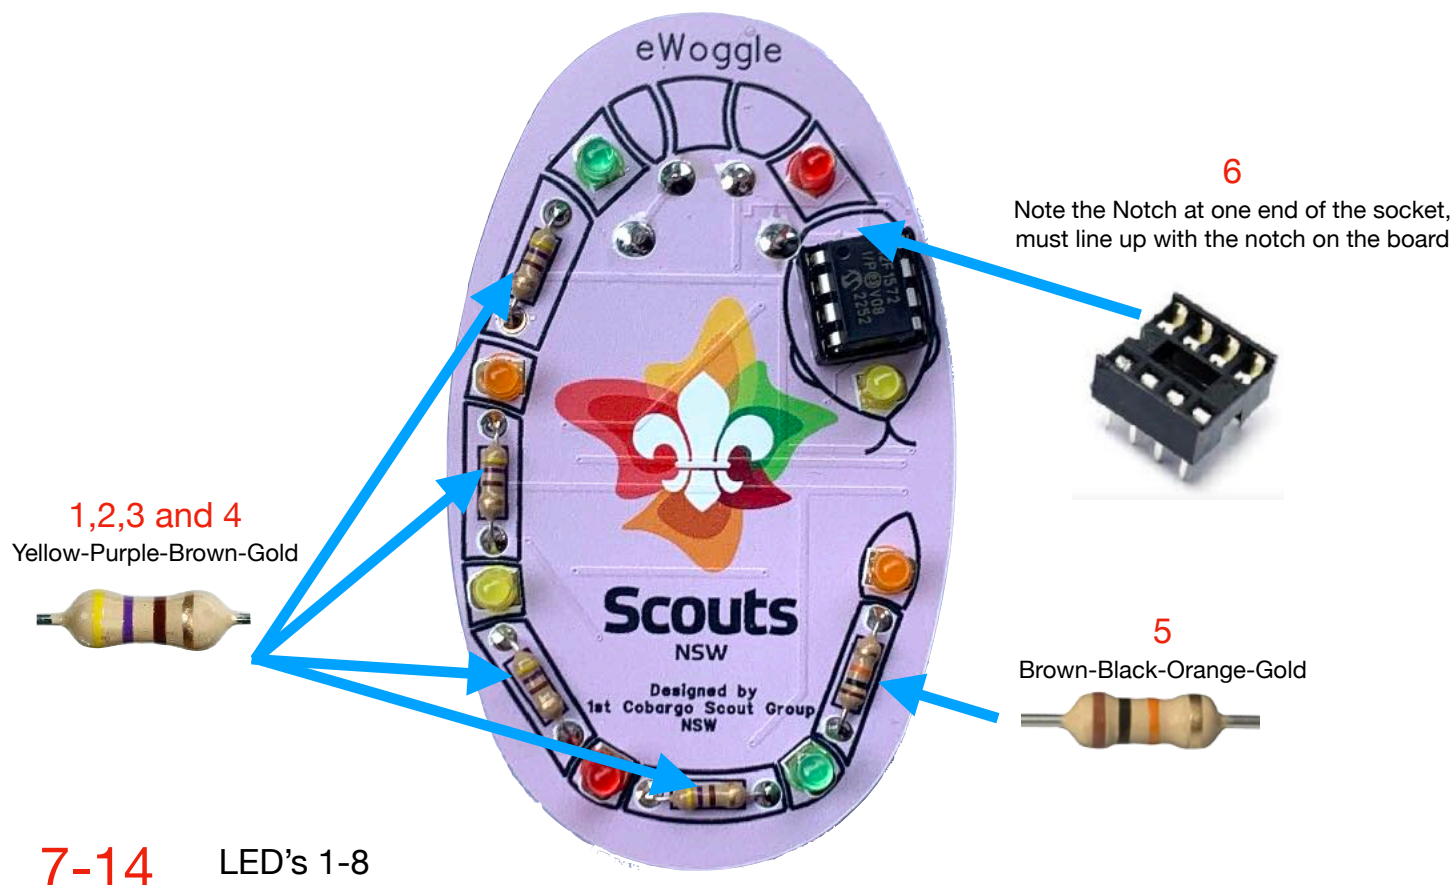

7-14 LED's 1-8





Put the 8 coloured LED's in from the front of the board, note that the colours must be in the same locations as the above photo

Note - The Flat side with the short lead is the "-" lead and goes in the hole towards the middle of the board.

Get a leader to look at them before you solder them in.

They will not work if you put them in the wrong way round.

look at the back of the board, the short lead goes in the holes towards the middle of the board (outlined in red)

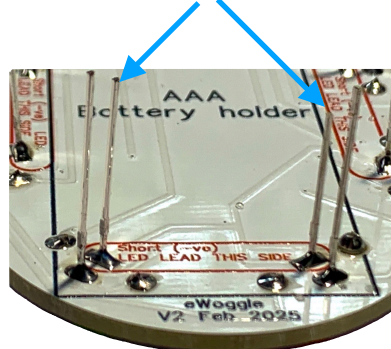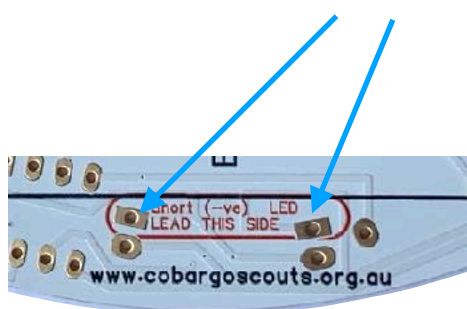


Please turn over the page for the rest of the installation instructions.

eWoggle assembly instructions

The Switch and battery Holder are installed on the rear of the Board,

- 15 Remove the Red top layer of the double sided tape
Solder the switch onto the back of the board

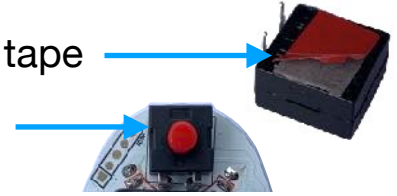


Ask your leader for the battery holder, batteries and IC. They will test your board 1st before you solder in the battery holder in.

- 16 Remove the red top layer of the double sided tape
Solder the battery holder into the back of the board



- 17 Write your name and group on the label onto side of the battery holder

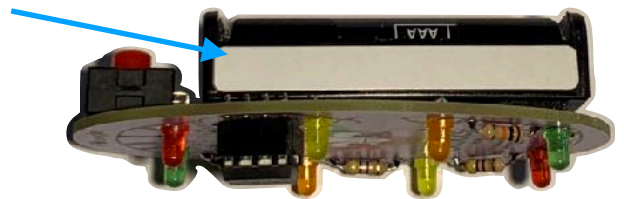

- 18 Slide the Velcro between the battery and the board

